

# Assembly Instructions

## 360° Extension Kit 24"


Item # 33237-E6

Step 1. Line up hinge with pre-drilled pilot holes on the extension. Use a screw driver to screw one screw in the top hole and one screw in the bottom hole. Repeat for bottom hinge.

Step 2. Attaching to gate: Set gate and extension on level, non-carpeted surface.

Step 3. Select which side of the gate to attach extension. Align hinge holes on the extension with the pre-drilled pilot holes in the gate. Repeat steps 1 and 2

360° Degree hinge x 2

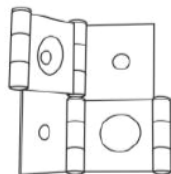

Wood screw x 8

